




DIGILOCK INSTALLATION INSTRUCTIONS STANDARD BODY RECESS MOUNT WITH CONVERSION PLATE


BEFORE BEGINNING INSTALLATION

BEFORE INSTALLING DIGILOCK CONFIRM THAT YOU HAVE A BACKPLATE (E) INSTALLED ON THE INSIDE OF YOUR LOCKER DOOR. IF YOU DO NOT HAVE A BACKPLATE INSTALLED, PLEASE INSTALL AS PICTURED BELOW.

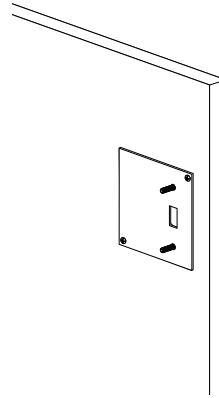

STEP 1

INSERT THE CONVERSION PLATE (F) INTO THE EXISTING RECESS CUTOUT ON THE LOCKER DOOR.

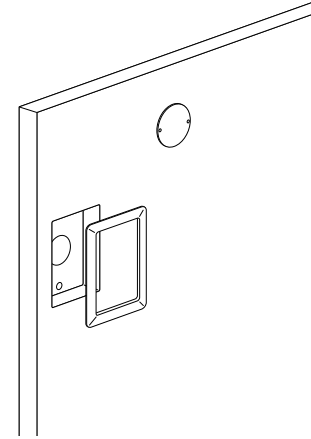


INCLUDED COMPONENTS:

(A) 2 - LOCKING NUTS	(B) 1 - PIN EXTENDER	(C) 1 - FRONT UNIT	(D) 1 - REAR UNIT
		TOOLS REQUIRED: 3/8" SOCKET ATTACHED TO A SCREW GUN OR RATCHET	
(E) BACKPLATE	(F) CONVERSION PLATE		

STEP 2


PLACE THE PIN EXTENDER (B) ON THE CONNECTOR PINS OF THE REAR UNIT (D).

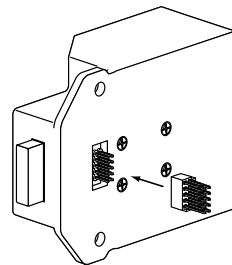

NOTE: DO NOT TOUCH THE REAR UNIT CONNECTOR PINS (MALE CONNECTOR) AGAINST ANY METAL OR OTHER CONDUCTIVE SURFACES. THIS MAY SHORT THE BATTERIES AND CAUSE DAMAGE TO THE LOCK.


STEP 3

PLACE THE MOUNTING SCREW POSTS OF THE DIGILOCK FRONT UNIT (C) THROUGH THE LOCK MOUNTING HOLES ON THE FRONT OF THE DOOR.

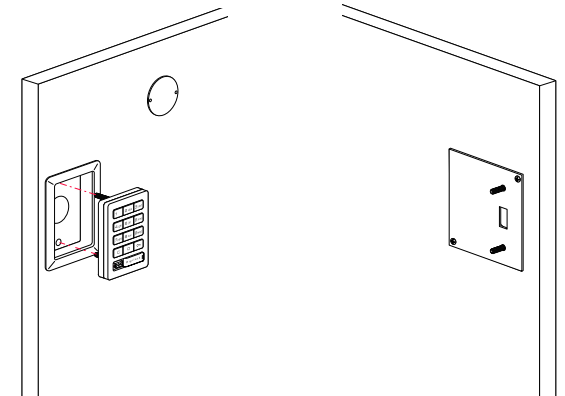

STEP 4


WHILE HOLDING THE FRONT UNIT (C) AGAINST THE FRONT OF THE DOOR, PLACE THE REAR UNIT (D) AGAINST THE REAR FACE OF THE DOOR, ALIGNING ITS MOUNTING HOLES WITH THE MOUNTING SCREW POSTS FROM THE FRONT UNIT.

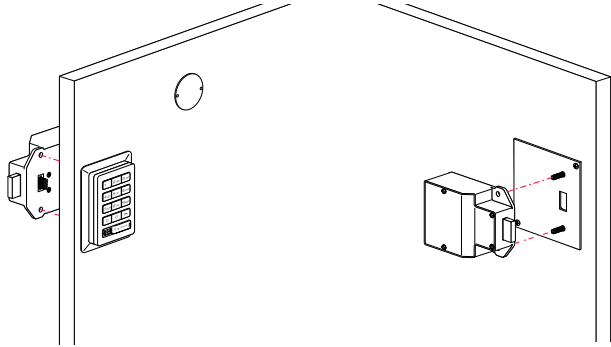


NOTE: DO NOT TOUCH THE REAR UNIT CONNECTOR PINS (MALE CONNECTOR) AGAINST ANY METAL OR OTHER CONDUCTIVE SURFACES. THIS MAY SHORT THE PINS AND CAUSE DAMAGE TO THE LOCK.

STEP 6

PLACE THE LOCKING NUTS (A) OVER THE MOUNTING SCREWS AND TIGHTEN TO SECURE THE LOCK TO THE DOOR. (DO NOT OVERTIGHTEN).

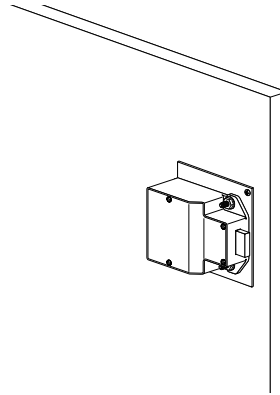


INSTALLATION COMPLETE

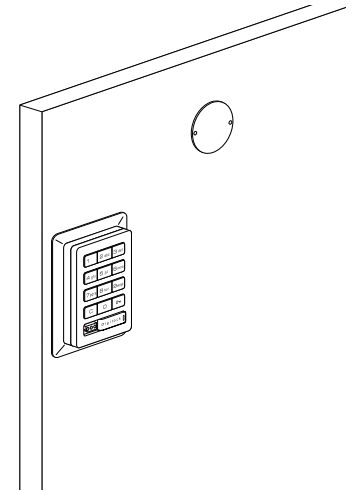

STEP 5

SLIDE THE FRONT UNIT (C) AND REAR UNIT (D) TOGETHER MAKING SURE THAT THE PINS OF THE REAR UNIT CONNECTOR ALIGN WITH THE FRONT UNIT (C) CONNECTOR.

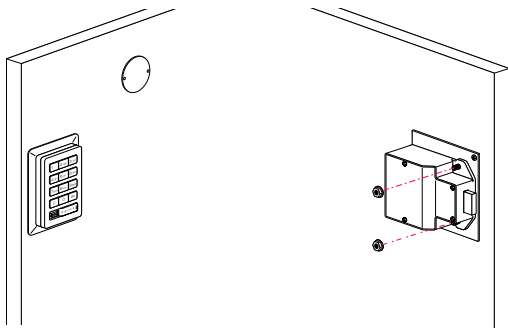

NOTE: AN AUDIBLE TRIPLE BEEP AND THREE FLASHES OF THE LED INDICATES THAT THE LOCK WAS CONNECTED PROPERLY. IF YOU DO NOT HEAR THIS BEEP, REMOVE THE FRONT UNIT, PRESS THE "C" BUTTON AND RECONNECT THE FRONT AND REAR UNITS.

STEP 7

TEST THE OPERATION SEVERAL TIMES WHILE THE DOOR IS OPEN. CLOSE THE DOOR AND TEST THE UNIT AGAIN. MAKE SURE THERE IS NO BINDING BETWEEN THE BOLT AND THE DOOR'S STRIKE PLATE AND/OR FRAME. ADJUST THE LOCKER IF NECESSARY.

TO LOCK AND UNLOCK ENTER:



NOTE: IF DURING OPERATION OF THE LOCK, THE LOCK EMITS 10 RAPID BEEPS AND 10 FLASHES OF THE LED, IT IS AN INDICATOR THAT THE BOLT OF THE LOCK IS BINDING WITH THE DOOR'S STRIKE PLATE AND/OR FRAME.

FOR ADDITIONAL PRODUCT AND/OR PRODUCT INFORMATION

CONTACT DIGILOCK OR YOUR DIGILOCK RESELLER.

Digilock[®]
www.digilock.com

5341 OLD REDWOOD HIGHWAY, SUITE 200
PETALUMA, CA 94954

PHONE: (800) 989.0201 OR (707) 766.6000
FAX: (800) 986.4221 OR (707) 766.6226

Copyright © 2008 Digilock, 59-INSR1-01